

SHARP 21F-A30 OPERATION MANUAL



Table of Contents

[operation manual](#)

[Table of Contents](#)

[Accessories](#)

[Easy setup](#)

[Safety precautions](#)

[Part names](#)

[Installing batteries in the remote control unit](#)

[tv front](#)

[tv set](#)

[Watching a TV programme](#)

Operating the TV buttons

Channel/Timer display

Mute

Channel recall

TV/Video selection

Selecting a menu item

On-screen display language selection

Auto channel tuning

Manual channel tuning

Channel setting

Picture adjustment

Sound adjustment

Surround sound

Mono bilingual system

Blue screen

Off timer

On timer

Reminder on-screen timer

Connecting to a DVD player

Watching DVD Playback

Connecting to an antenna

Connecting to an antenna via a VCR

Connecting to video equipment

Troubleshooting

Specifications

sharp corporation

Other ManualsLib Projects


SHARP®

COLOUR TELEVISION

MODEL

21F-A30

■ OPERATION MANUAL ■

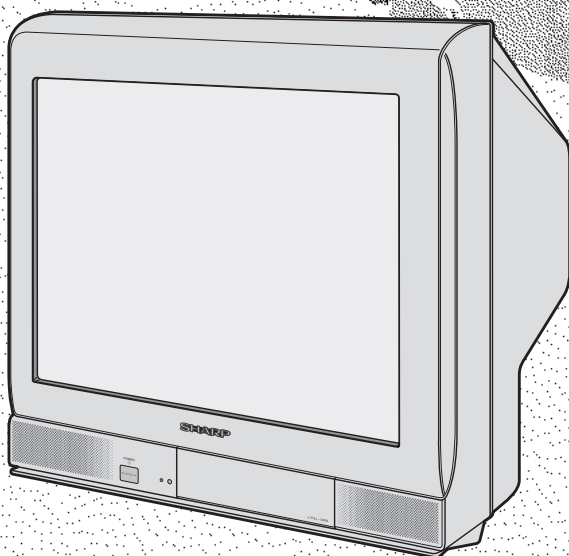

Please read this operation manual
carefully before using the colour
television.

Contents



Preparation

Accessories	2
Easy setup	3
Safety precautions	4
Part names	6
Installing batteries in the remote control unit	6



Watching TV

Watching a TV programme	8
Operating the TV buttons	9



Useful features

Channel/Timer display	10
Mute	10
Channel recall	11
TV/Video selection	11



Selecting menu items

Selecting a menu item	12
-----------------------------	----



Settings and adjustments

On-screen display language selection	13
Auto channel tuning	14
Manual channel tuning	15
Channel setting	16
Picture adjustment	17
Sound adjustment	18
Surround sound	19
Mono bilingual system	19
Blue screen	20
Off timer	21
On timer	22
Reminder on-screen timer	23



Connections

Connecting to a DVD player	24
Watching DVD Playback	24
Connecting to an antenna	25
Connecting to an antenna via a VCR	25
Connecting to video equipment	26



Troubleshooting

Troubleshooting	27
-----------------------	----




Specifications

Specifications	28
----------------------	----


Dear SHARP Customer

Thank you for buying SHARP's Colour Television. We hope you will have many years of enjoyment from this television set. To ensure proper operation, please read this manual carefully, and keep it in a safe place for future reference.

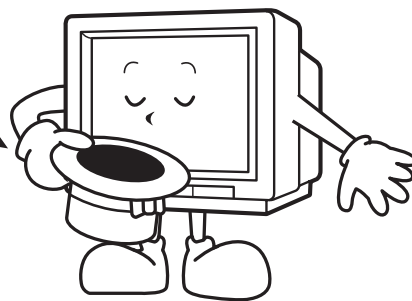


Accessories

The following accessories are included with this television.

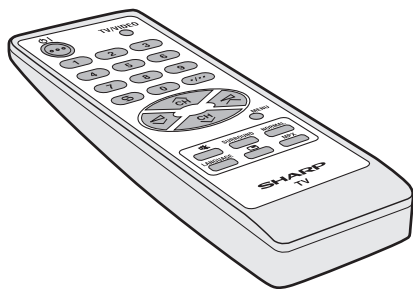

Remote control

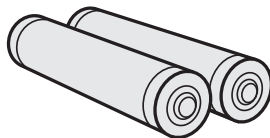

Size-AA batteries



Operation manual




Easy setup

To use your TV set, perform the easy setup procedure below.

The  mark indicates the page numbers with more detailed information.


1

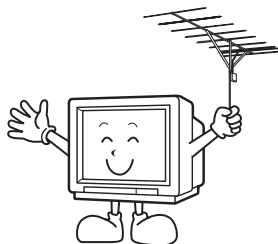

Connect the antenna.

- See  to connect the antenna.


2

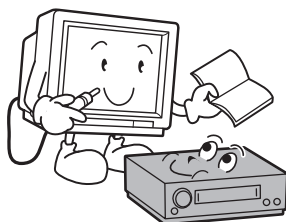

Connect any video equipment.

- See  ,  to connect video equipment.
- See the operation manual of your video equipment when connecting to the TV set.


3

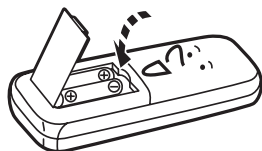

Insert the batteries into the remote control.

- Use the two batteries included with the TV.
- See  .


4

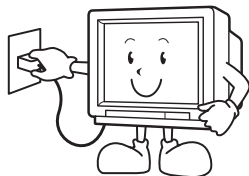

Insert the AC plug to the power outlet.

- If you will not use the TV set for a considerable length of time, as a safety precaution, unplug the cord from the outlet.

5

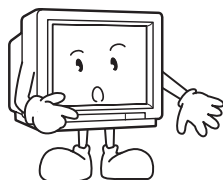


Tune the channels.

- Use the buttons on the TV.
- See  ,  .




Safety precautions

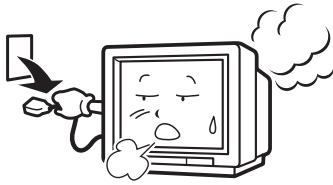


Damage

Turn off the power and unplug the power cord from the wall outlet immediately if the TV set begins to make any unusual noises or gives off smoke or an unusual smell. Then call your dealer for service.

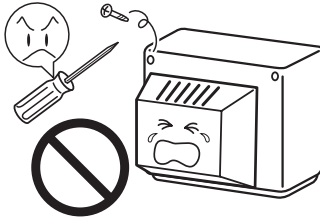

Servicing


To reduce the risk of electric shock, do not remove the back of the cabinet. This TV set contains dangerous voltage.

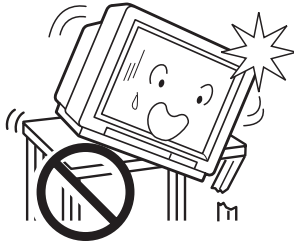

Unstable surface and shocks

Do not place this TV set on an unstable cart, stand, shelf, or table. The TV set may fall, causing serious injury to a child or adult, and serious damage to the set.

Sharp recommends securing the TV set to a stable surface or wall to prevent the set from falling due to sudden shocks or impact.

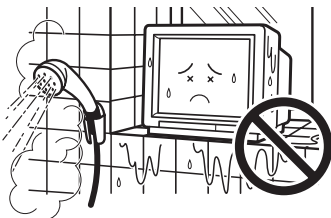


Water

To prevent fire or electrical shock, do not place the TV set near a bathroom, swimming pool or other area where it may become wet.



Moisture


To prevent electrical shock, do not use the TV set in an excessively damp place.

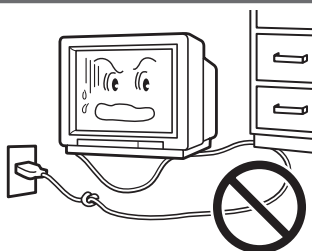

Power-cord protection

To prevent electrical shock, do not subject the AC power cord to damage by bending or twisting it, or by placing heavy items on top of it and do not place the AC power cord under the TV set. If the AC power cord becomes damaged, unplug it from the wall outlet immediately and call your dealer for service.

Safety precautions

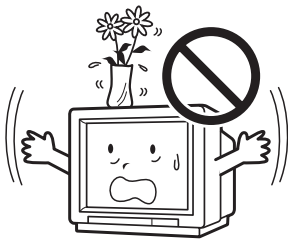


Liquid entry

Do not place a flower vase or anything else containing liquid on the TV set, as liquid spilt on the TV set can cause electrical shock or failure.




Object entry

Never insert or drop any metallic or inflammable objects into the ventilation openings of the TV set, as this can cause fire, electrical shock, or electrical failure.

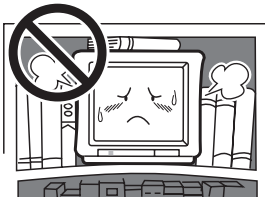

Ventilation

Do not place this TV set in a confined area, such as on a bookshelf or in a built-in case. Leave adequate space behind the TV for proper ventilation.

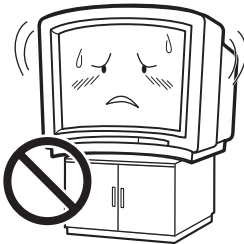

TV Set position

Do place the TV set onto an even stand, table or track which size is bigger than the TV set.
If the TV set is put onto a smaller size or uneven stand, table or track may cause the TV cabinet distort.
Do not put or insert anything between TV set and the stand, table or track.



Uneven surface and excessive force

Television equipment and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the equipment and cart combination to overturn.



Fire prevention


To prevent fire, never place any type of candle or naked flames on the top or near the TV set.



Part names

The  mark indicates the page numbers with more detailed information.


Remote control

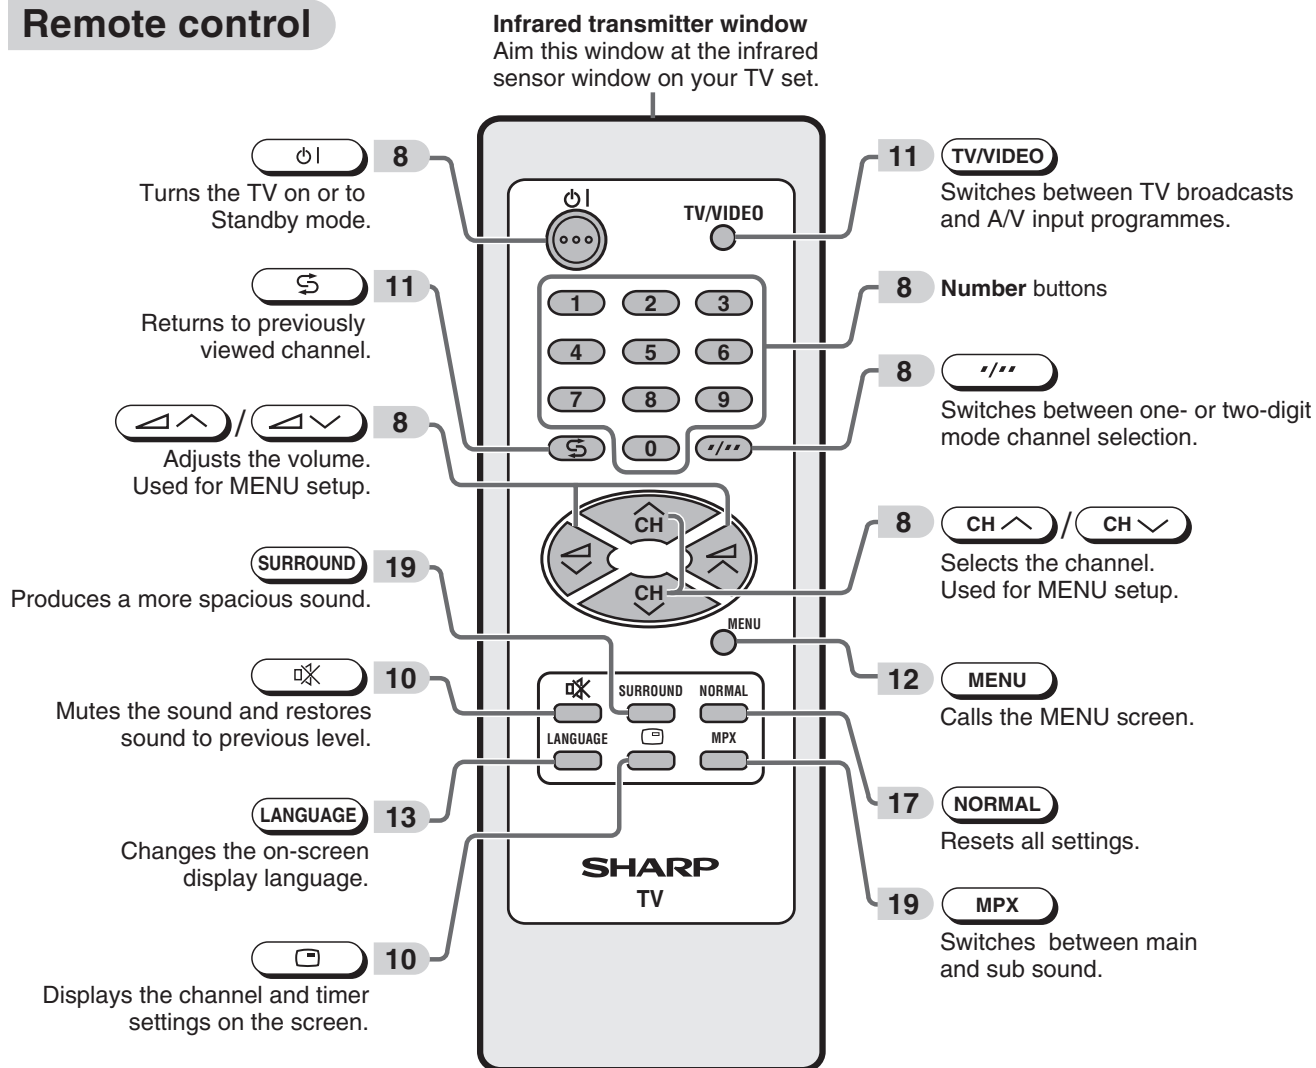

Installing batteries in the remote control unit


1

With your thumbnail, pull up at the slit to open the battery cover.

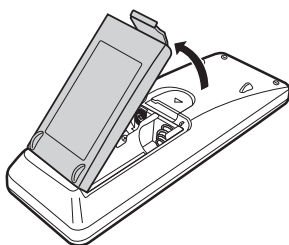


2

Insert two batteries (size AA).

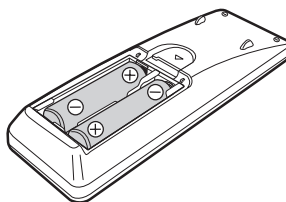

3

Replace the battery cover.

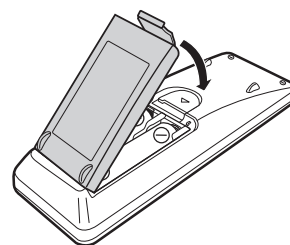



NOTE

- Be sure to match the battery $\oplus/\ominus$ terminals with the $\oplus/\ominus$ marks inside the compartment.
- Remove the batteries if weak or if the unit is not in use for long periods.
- Do not mix old and new batteries.
- Incorrect installation of the batteries may damage the remote control.


Part names

TV set

TV front

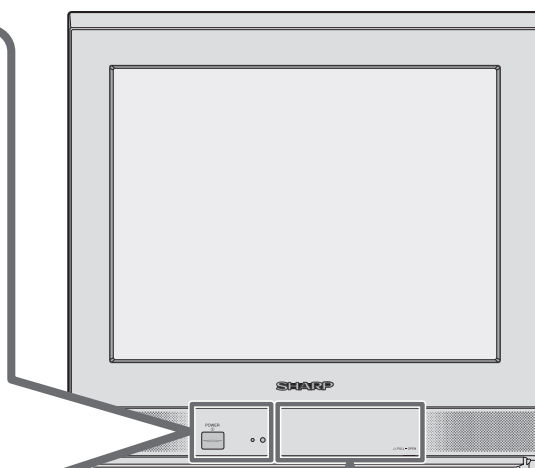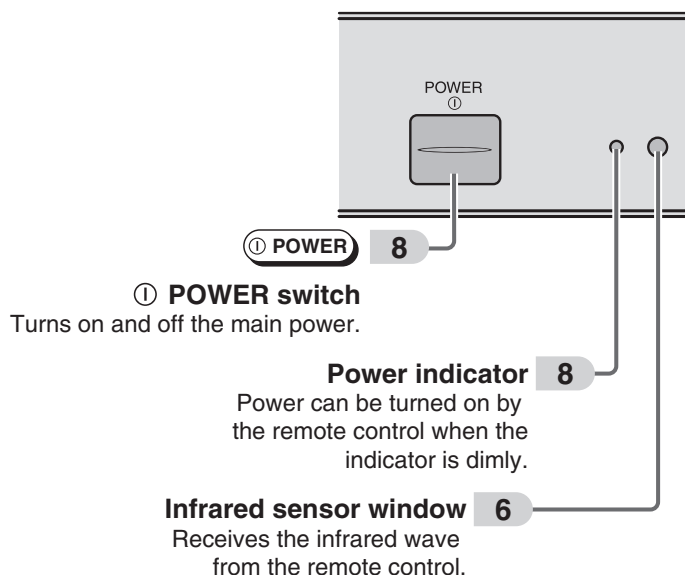

Behind the door

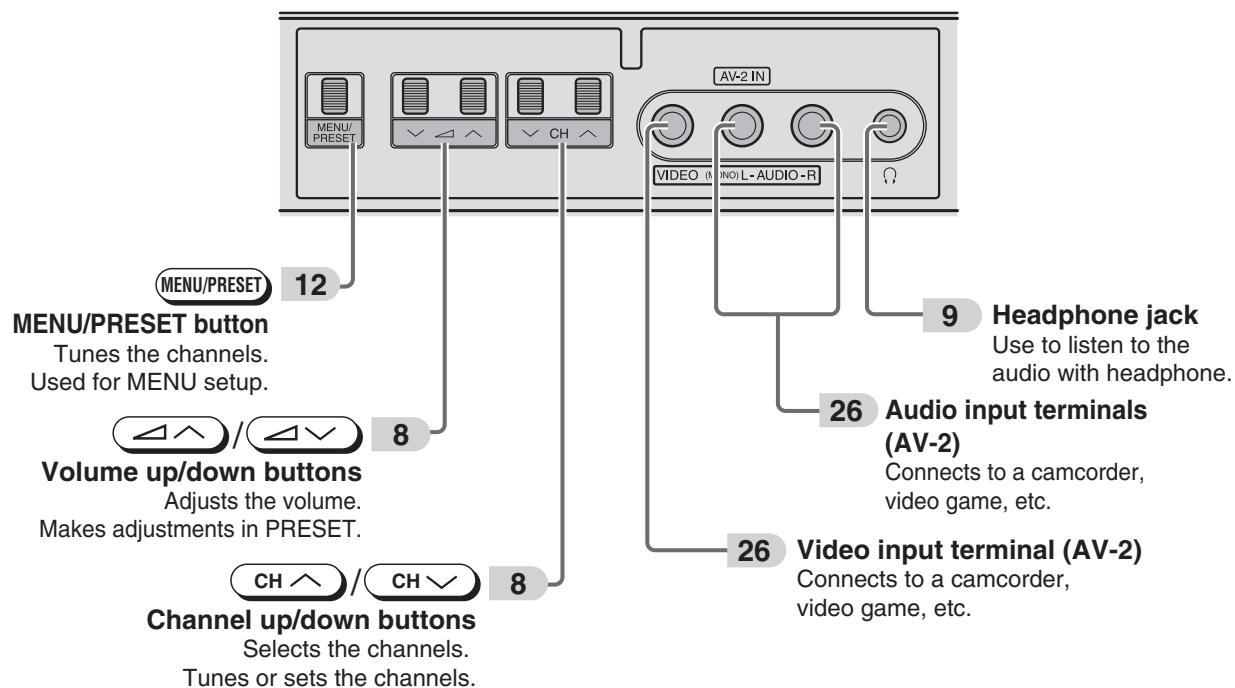


NOTE • When using headphone, see **9**.

Watching TV



Watching a TV programme

Simple operations for watching a TV programme

TV Set

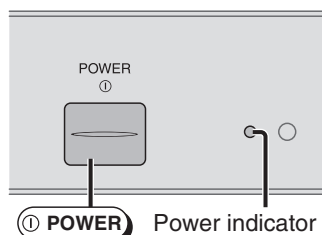

Behind the door

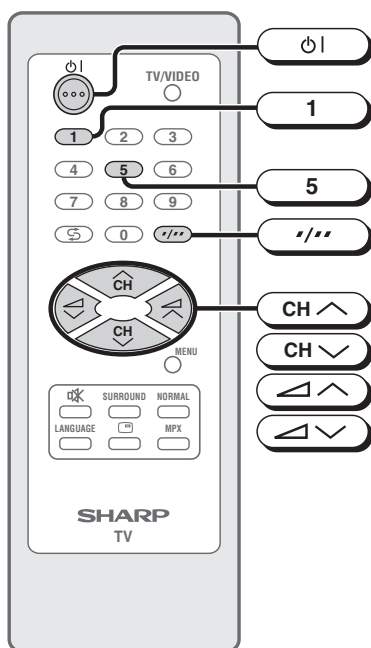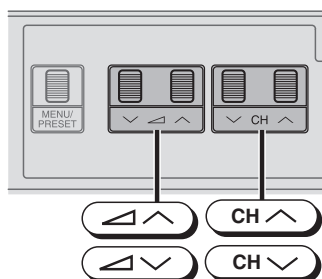

1 Turn on power.

- When the power indicator is off, press **POWER**.
- When the power indicator lights up dimly, press **⏻** on the remote control. The power indicator changes to bright and a picture appears.


2 Select channel.

With **CH+ / CH-**

- Press **CH+** and channels change as shown below.
1 → 2 → ... → 98 → 99 → AV1 (or COMPONENT) → AV2 → 0 → 1 → 2 ...
- Press **CH-** and channels change as shown below.
1 → 0 → AV2 → AV1 (or COMPONENT) → 99 → 98 → ... → 2 → 1 → 0 ...

With the number buttons (on remote control)

- To select a one-digit channel, such as 5, press **5**.
If "5-" is indicated, press **15** to select one-digit input, and then press **5** again.
- To select a two-digit channel, such as 15, press **15** to select the two-digit input. Press **1**, and then press **5**.

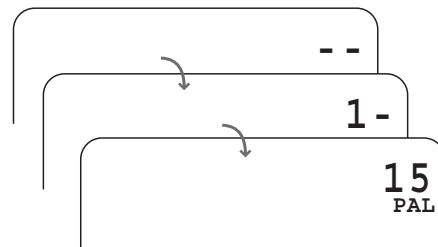

3 Adjust volume using **Δ** / **▽**.

- The number of oval blocks "●" indicates the volume level. The volume bar disappears approximately three seconds after the volume has been adjusted.




NOTE

- When the power indicator lights up dimly, either **CH+** / **CH-** on the TV can be pressed to turn on the power.
- The channel number is displayed in green for channels tuned by auto tuning and displayed in yellow for channels tuned using fine tuning.
- When the power indicator lights up dimly, the TV is in Standby mode and power is still supplied to the TV. If you will not watch TV for a while, turn off the main power by pressing **POWER** on the TV set. Also, if you will not be at home for a considerable length of time, unplug the cord from the outlet.
- The AV1 (or COMPONENT), AV2 input channels cannot be selected using **CH+** / **CH-** on the remote control. Use **TV/VIDEO** to select these channel.
- Channels that have been skipped cannot be selected by **CH+** / **CH-**. See **16**.
- The on-screen displays in this manual may differ from their actual appearance.

Operating the TV buttons

Simple operation of the TV set

Behind the door

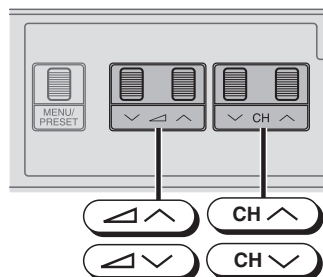

Using  / 

Press  to increase volume.

Press  to decrease volume.




Using  / 

Press  to increase channel number.

Press  to decrease channel number.



Behind the door

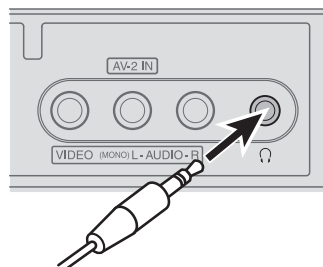

Using headphone

Insert headphone plug into headphone jack to listen to audio with headphone.

- The audio from the speakers is turned off.

NOTE


- Select an appropriate volume so as not to injure your hearing.
- To avoid injuring your hearing, do not put on the headphone before plugging them into the headphone jack and before the power is turned on.
- The proper impedance for the headphone is 32 ohms.
- Remove the headphone plug from the jack when not using the headphone.



Useful features

Channel/Timer display

Displays the current channel number, the timer, and other settings on the screen.

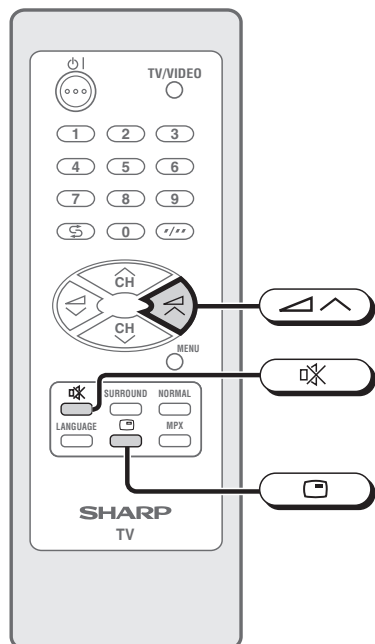

1 Press .

- The time remaining on the Off timer, On timer, and Reminder appears on the screen.
- When no timer is set, the channel number, colour and sound system appear on the screen. Press  again to clear these current settings display on the screen.

OFF		2:30
ON		8:00
		1:50

2 Press again.

- The channel number, colour and sound system appear on the screen.

5
PAL

3 Press once again.

- The display disappears.

Mute

Silences the sound.

1 Press .

- “” appears on the screen, and the sound is silenced.



2 Press again.

- The volume returns to its previous level.



NOTE

• Mute will be cancelled if the  is pressed at any time.

Channel recall



Switches back to the channel you were watching just before the current channel.

Press **↩**.

- The channel previously viewed returns to the screen.

Example:


After switching from channel 5 to channel 7, **↩** is pressed, the channel will change to channel 5. Press **↩** again to return to channel 7.

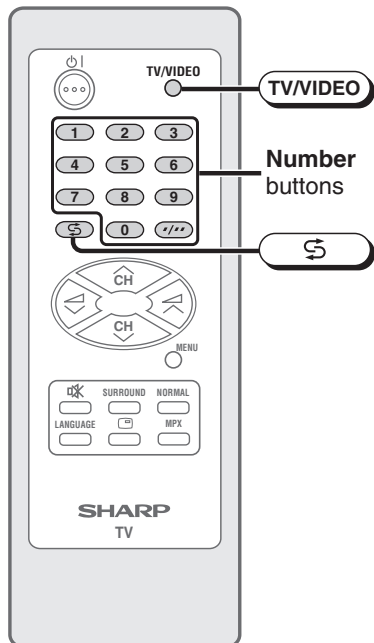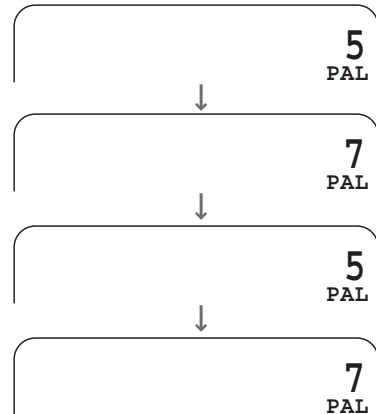

TV/Video selection

Switches between TV broadcasts and AV input programmes.

Each time you press the **TV/VIDEO**, the input switches between AV1 (or COMPONENT), AV2 and TV programme.

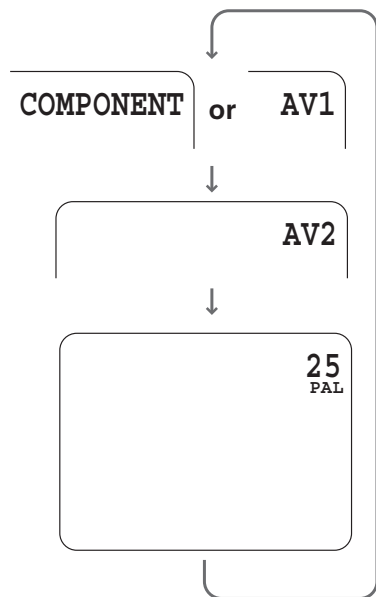






Selecting menu items

This TV set allows you to adjust the picture and sound, and set the channels and other features using the On-screen display with the remote control or from the TV set. Select the desired menu item by following the steps below and then refer to the indicated page for details.

Remote control

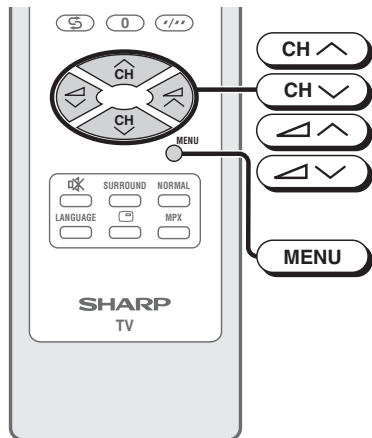

Behind the door

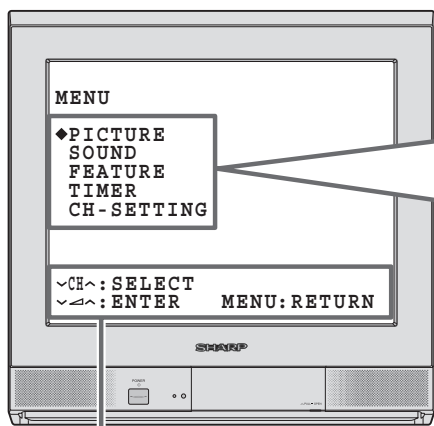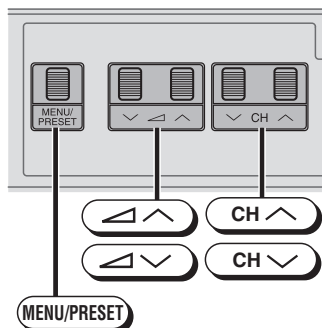

Operating guide

Selecting a menu item

1 Press **MENU** / **MENU/PRESET** to call MENU screen.

MENU
◆PICTURE
SOUND
FEATURE
TIMER
CH-SETTING

2 Press **CH** / **CH** to select desired menu item.
• The selected item is highlighted in yellow.

MENU
PICTURE
◆SOUND
FEATURE
TIMER
CH-SETTING

3 Press **↶** / **↷** to enter.
• The corresponding menu screen will appear.

SOUND
SURROUND OFF
◆TREBLE 0
BASS 0
BALANCE 0

PICTURE menu 17

PICTURE
◆CONTRAST 60
COLOUR 0
BRIGHTNESS 0
TINT 0
SHARPNESS 0
WHITE TEMP ◆
↶CH: SELECT MENU: RETURN
↷CH: ADJUST

SOUND menu 18

SOUND
◆SURROUND OFF
TREBLE 0
BASS 0
BALANCE 0
↶CH: SELECT MENU: RETURN
↷CH: ADJUST

FEATURE menu 20

FEATURE
◆BLUE BACK OFF
↶CH: ADJUST MENU: RETURN
↷CH: SELECT

TIMER menu 21 - 23

TIMER
◆OFF □ ---
ON □ ---
POSITION ---
VOLUME ---
↶CH: SELECT MENU: RETURN
↷CH: ADJUST

CH-SETTING menu 16

CH-SETTING
◆POSITION CH27
COLOUR AUTO
SKIP OFF
FINE 168.25MHz
↶CH: SELECT MENU: RETURN
↷CH: ADJUST

NOTE

- If you press **MENU/PRESET** for more than two seconds, the LANGUAGE mode screen will appear instead of the MENU screen. To display the MENU screen, press **MENU/PRESET** until the normal screen appears, then press the button again.
- The procedures for setting and selecting the menu items on the following pages are described using the buttons on the remote control. These procedures can also be performed using the corresponding buttons on the TV set.




Settings and adjustments

On-screen display language selection

The on-screen display language can be set to English or Thai.

Remote Control

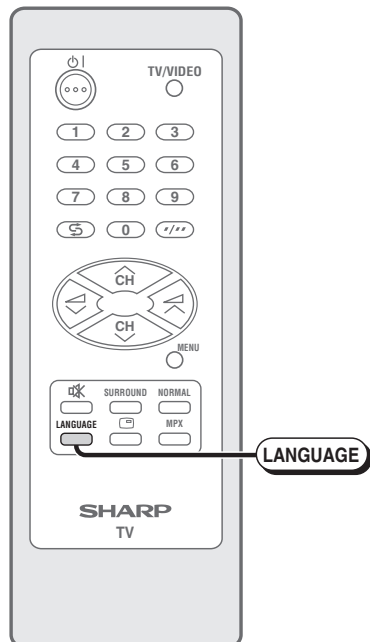

1 Press **LANGUAGE** to select desired language.

- Pressing **LANGUAGE** changes the language as shown below.

ENGLISH → ภาษาไทย

ENGLISH

TV set

1 Press **MENU/PRESET** for more than two seconds.

- The language select mode appear.

◆ ENGLISH
ภาษาไทย


2 Press **CH ^** / **CH v** to select desired language.

- Pressing **MENU/PRESET** changes the screen as shown below.


→ Language → AUTO → MANUAL
Normal screen ←

3 Press **MENU/PRESET** until normal screen appears.

Behind the door

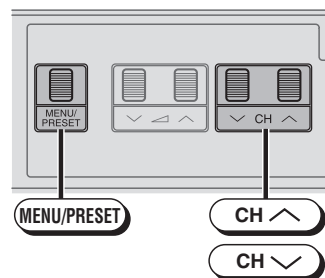

Behind the door

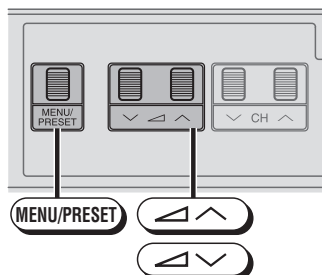

Auto channel tuning

Automatically tunes in and presets receivable TV stations.

1

Press **MENU/PRESET** for more than two seconds.

- The language select mode appear.

◆ENGLISH
ภาษาไทย

2

Press **MENU/PRESET** again to display AUTO mode screen.

- Pressing **MENU/PRESET** changes the screen as shown below.

→ Language → AUTO → MANUAL
Normal screen ←

AUTO
VHF 1
48.25MHz

3

Press **▲▲** / **▲▼** on TV set.

- All the TV stations in your area that can be received by the TV set are automatically preset between channels 1 to 99.
- The screen shows whatever is on channel 1 when auto channel preset is finished.

1
PAL



NOTE

- AUTO PRESET stores all receivable channels including those which may be very weak and not clearly visible. To preset only those channels designated for the local viewing region, use MANUAL PRESET. See **15**.
- Unused channels are automatically skipped.


Manual channel tuning

Enables manual channel tuning to a desired TV station.

Behind the door

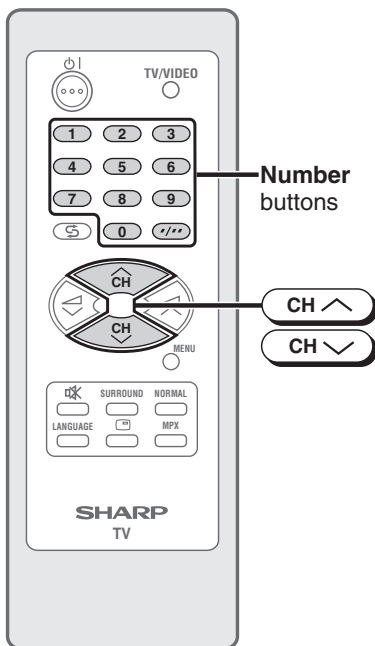
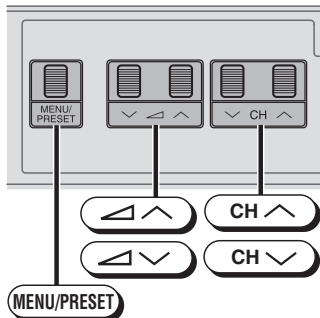


- 1** Press **MENU/PRESET** for more than two seconds.
 - The language select mode appear.

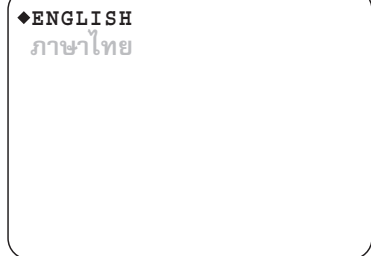

- 2** Press **MENU/PRESET** twice to display **MANUAL** mode screen.


- Pressing **MENU/PRESET** changes the screen as shown below.

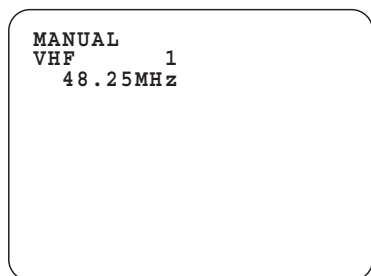

- 3** Press **CH ^** / **CH v** or number buttons to select channel position.

- 4** Press **△ ^** / **△ v** on TV set to locate channel you wish to preset to current channel position.

- Search is initiated and when a TV signal is received during the search, the search stops.

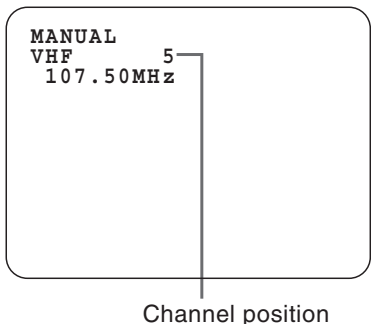


- 5** Repeat steps 3 and 4 above, to preset channel positions for other broadcasts.

- 6** Press **MENU/PRESET** again to display normal screen.

Channel setting

Enables individual channel setting.

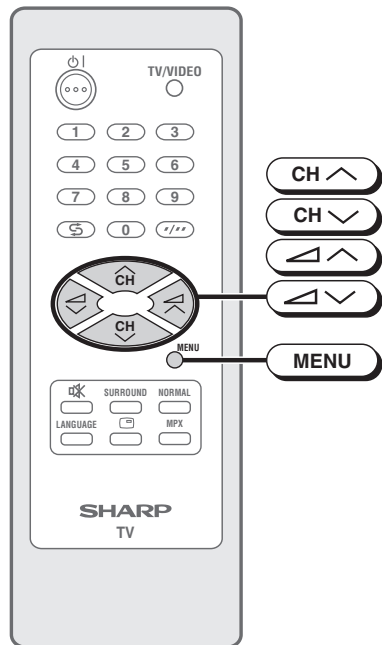

1 Press **MENU** to call MENU screen.

```
MENU
PICTURE
SOUND
FEATURE
TIMER
◆CH-SETTING
```

2 Press **CH ^** / **CH v** to select "CH-SETTING".

3 Press **△** / **▽** to display CH-SETTING menu.

```
CH-SETTING
◆POSITION      CH27
COLOUR         AUTO
SKIP           OFF
FINE           168.25MHz
```

4 Press **CH ^** / **CH v** to select desired setting.

5 Each time you press **△** / **▽**, setting for individual items changes as follows:

- **POSITION**
The channel position changes to the higher or lower number.
- **COLOUR**
AUTO ↔ PAL
- **SKIP**
ON ↔ OFF
Channel numbers with a "■" mark on the left are set to SKIP. To turn off SKIP, press the number buttons to select the desired channel and then set "SKIP" to "OFF".
- **FINE**
The frequency changes to allow fine tuning.

```
▽CH^: SELECT
▽△: ADJUST  MENU: RETURN
```

6 Press **MENU** until normal screen appears.

- When you select AV1, AV2 for the channel position, the CH-SETTING menu changes as shown on the right and the colour mode changes in the following order:

```
CH-SETTING
◆POSITION      AV1
COLOUR         AUTO
```


```
▽CH^: SELECT
▽△: ADJUST  MENU: RETURN
```

→ AUTO ↔ PAL ↔ N443 ↔ N358 ←

NOTE

- Switching COLOUR system:
Set the system to "AUTO" for normal TV reception. The AUTO mode automatically detects the receiving signal system and changes the reception system of the TV set. When the picture is not stable, switching to an appropriate system may improve the picture quality.
- In a weak reception area, or under bad reception conditions, you can change the frequency by fine tuning.
- When using FINE, the channel number changes from green to yellow.
- To return the channel to its original frequency setting, follow the manual channel tuning procedure. See **15**.
- Channel setting menu cannot be selected during COMPONENT mode.

Picture adjustment

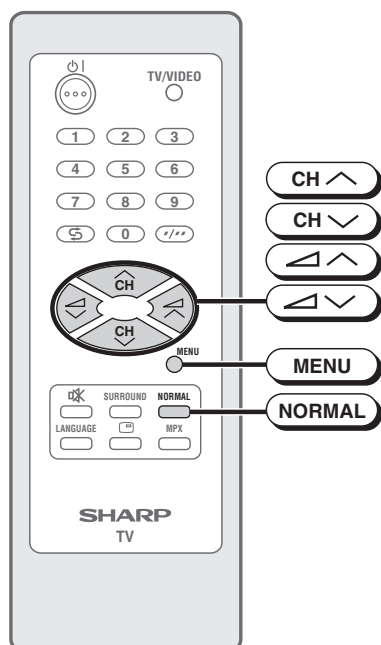

1 Press **MENU** to call MENU screen.

2 Press **CH ^** / **CH v** to select "PICTURE".

3 Press **△** / **▽** to display PICTURE menu.

4 Press **CH ^** / **CH v** to select adjustment items.

5 Adjust using **△** / **▽**.

- Wait for approximately three seconds to return to PICTURE menu.

MENU

- ◆ PICTURE
- SOUND
- FEATURE
- TIMER
- CH-SETTING

PICTURE

- ◆ CONTRAST 50
- COLOUR 0
- BRIGHTNESS +10
- TINT
- SHARPNESS -10
- WHITE TEMP

CONTRAST 50

- | | | +

6 Repeat steps 4 and 5 above to adjust other items.

7 Press **MENU** until normal screen appears.


- Pressing **NORMAL** while a PICTURE selection is displayed, only the selected mode is reset to the standard (factory-setting) position.
- Pressing **NORMAL** while a PICTURE menu screen is displayed will reset all the items of PICTURE menu to the standard (factory-setting) position.

The following table lists the adjustment items shown in the PICTURE menu and how they change as you press **△** / **▽**.

Selected item	Press ▽	Press △
CONTRAST	To decrease contrast - + ← →	To increase contrast - + ← →
COLOUR	For less colour intensity - + ← →	For more colour intensity - + ← →
BRIGHTNESS	For less brightness - + ← →	For more brightness - + ← →
TINT*	To move tint toward red ◆ ◇ ← →	To move tint toward green ◆ ◇ ← →
SHARPNESS	For less sharpness - + ← →	For more sharpness - + ← →
WHITE TEMP	To more reddish background ◆ ◇ ← →	To more bluish background ◆ ◇ ← →

*: TINT can only be selected and adjusted when receiving NTSC broadcasts. (AV only)

Sound adjustment

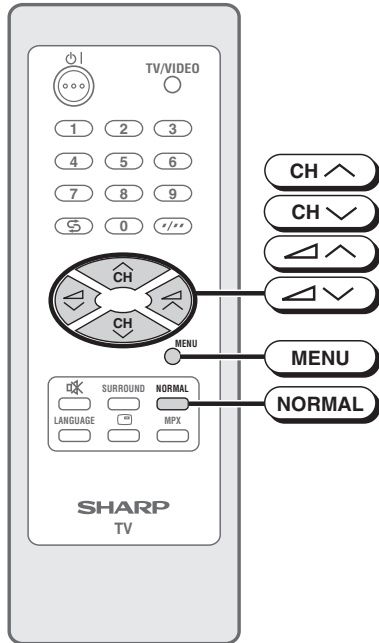

1 Press **MENU** to call MENU screen.

2 Press **CH ^** / **CH v** to select "SOUND".

3 Press **△** / **▽** to display SOUND menu.

4 Press **CH ^** / **CH v** to select adjustment items.

5 Adjust using **△** / **▽**.

- Wait for approximately three seconds to return to SOUND menu.

MENU
PICTURE
◆SOUND
FEATURE
TIMER
CH-SETTING

SOUND
SURROUND ON@
◆TREBLE +10
BASS -20
BALANCE ▷20

TREBLE
- | | | +
+10

6 Repeat steps 4 and 5 above to adjust other items.

7 Press **MENU** until normal screen appears.

- Pressing **NORMAL** while a SOUND selection is displayed, only the selected mode is reset to the standard (factory-setting) position.
- Pressing **NORMAL** while the SOUND menu screen is displayed will reset all the items of SOUND menu to the standard (factory-setting) position.


The following table lists the adjustment items shown in the SOUND menu and how they change as you press **△** / **▽**.

Selected item	Press ▽	Press △
SURROUND*	ON ↔ ON ↔ OFF	
TREBLE	To decrease treble - + ← →	To increase treble
BASS	To decrease bass - + ← →	To increase bass
BALANCE	To shift balance toward left ◀ ▶ ← →	To shift balance toward right

*: SURROUND mode can be set to "ON ", "ON " or "OFF". See **19**

Surround sound

Produces a virtual surround sound from the TV's speakers.

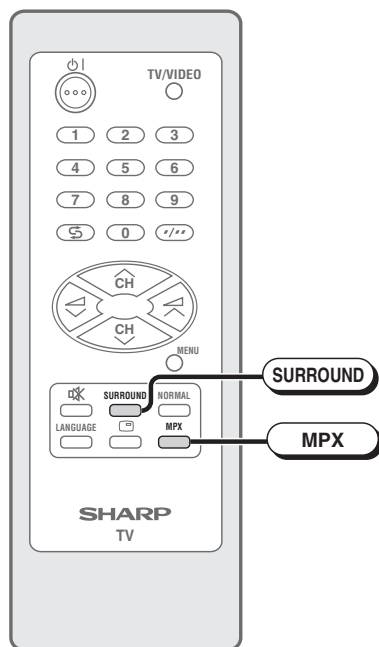


Each time you press **SURROUND**, the mode changes between **ON₀**, **ON₁** and **OFF**.

OFF: Produces normal sound.

ON₀: Setting to this mode during stereo signal reception produces a spacious sound, making the most of the speakers' performance.


ON₁: Setting to this mode during monaural signal reception creates monaural sound that is similar to stereophonic sound.

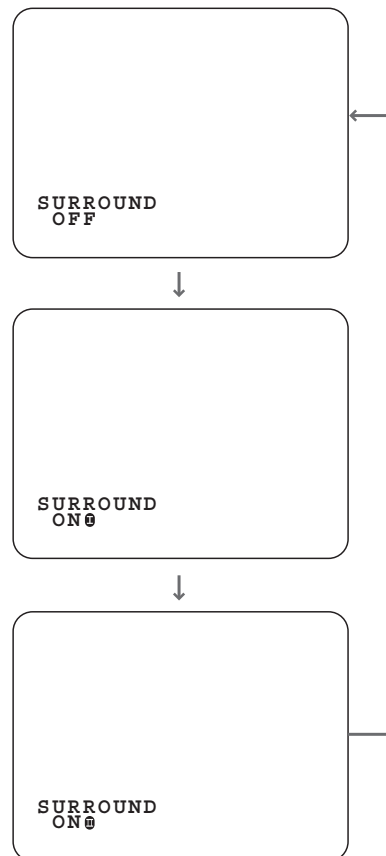

Mono bilingual system

Enables selection of reception mode when receiving a bilingual signal.


Each time you press **MPX**, the mode switches between **SOUND 1** or **SOUND 2**.

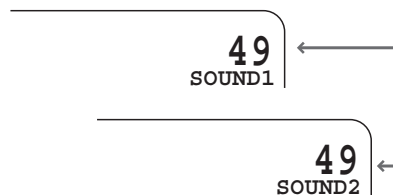

NOTE • The surround effect can be adjusted using the **SOUND** menu. See **18**.

Blue screen

Automatically turns the screen blue if a broadcast signal is not received.

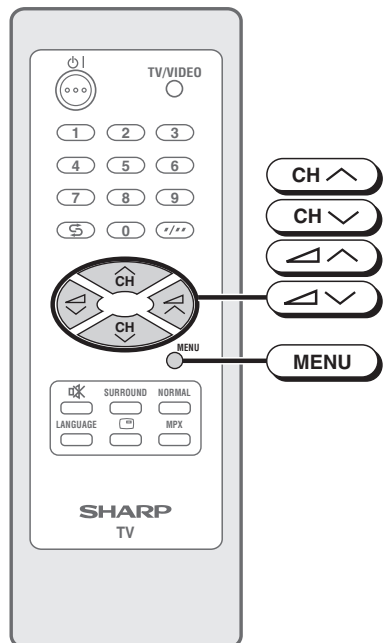

1 Press **MENU** to call MENU screen.

2 Press **CH** / **CH** to select "FEATURE".

```
MENU
PICTURE
SOUND
◆FEATURE
TIMER
CH-SETTING

<CH>: SELECT
<CH>: ENTER    MENU: RETURN
```

3 Press **CH** / **CH** to display FEATURE menu.

4 Press **CH** / **CH** to select "BLUE BACK" to "ON" or "OFF".

```
FEATURE
◆BLUE BACK      ON

<CH>: ADJUST    MENU: RETURN
```

5 Press **MENU** until normal screen appears.

When BLUE BACK is set to "ON".

No signal




after 5 seconds

Blue screen



after 15 minutes
(If OFF TIMER
is not set)

TV off



Standby mode

(Indicator)




Power indicator
lights up dimly

NOTE

- Poor reception due to weak signals and too much noise may activate BLUE BACK, despite the presence of a broadcast signal. To continue watching TV under these conditions, switch "BLUE BACK" to "OFF".
- When Off timer is set, the OFF TIMER setting has priority over BLUE BACK.

Off timer

Automatically turns power off after a set length of time has passed.

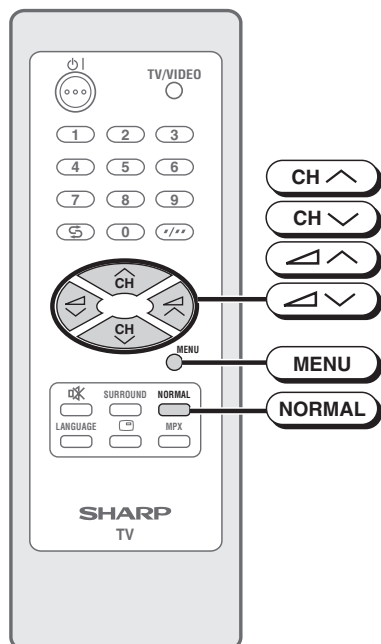

1 Press **MENU** to call MENU screen.

```
MENU
PICTURE
SOUND
FEATURE
◆TIMER
CH-SETTING
```

2 Press **CH ^** / **CH v** to select "TIMER".

3 Press **CH ^/v** to display TIMER menu.

```
TIMER
◆OFF □ ---:--
ON □ ---:--
POSITION
VOLUME ---:--
```

4 Press **CH ^** / **CH v** to select "OFF □".


5 Press **CH ^/v** to set time for TV to turn off.

- Maximum time that can be preset is 12 hours and 50 minutes.
- As soon as the time is entered, the timer starts to count down.

```
TIMER
◆OFF □ 2:30
ON □ ---:--
POSITION
VOLUME ---:--
~CH^: SELECT
~CHv: ADJUST MENU: RETURN
```

6 Press **MENU** until normal screen appears.


- Five minutes before the preset length of time expires (in the example, after two hours and 25 minutes), the remaining time appears on the screen.
- A flashing display of the remaining time appears during the last few seconds.
- When the preset length of time has passed, the TV set enters the Standby mode.

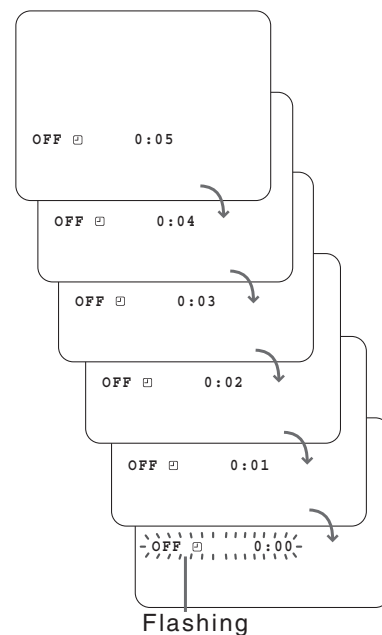


- NOTE**
- To cancel the timer setting, press **NORMAL** when "◆" is displayed on the left of "OFF □" so as to set the timer to "--:--".
 - The timer can be set in ten-minute intervals.
 - The Off timer is cancelled if the power is turned off or set to the Standby mode using **⏻** on the remote control or **⏻** on the TV set, or if the power is otherwise interrupted.

On timer

Automatically turns power on after a set length of time has passed.

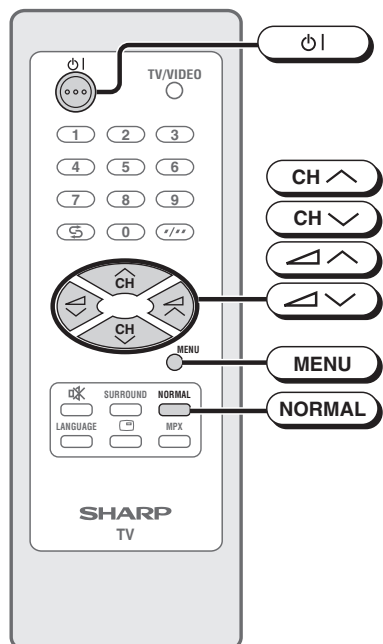

TV Set

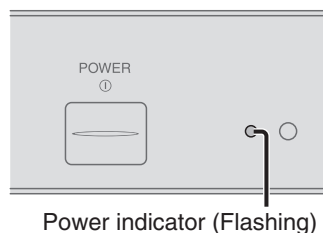

- 1** Press **MENU** to call MENU screen.
- 2** Press **CH $\wedge$** / **CH $\vee$** to select "TIMER".
- 3** Press **$\triangleleft$** / **$\triangleright$** to display TIMER menu.
- 4** Press **CH $\wedge$** / **CH $\vee$** to select "ON $\square$ ".
- 5** Press **$\triangleleft$** / **$\triangleright$** to set time for TV to turn on.
 - Maximum time that can be preset is 12 hours and 50 minutes.
 - As soon as the time is entered, the timer starts to count down.
- 6** Press **CH $\wedge$** / **CH $\vee$** to select "POSITION".
- 7** Press **$\triangleleft$** / **$\triangleright$** to set the channel.
- 8** Press **CH $\wedge$** / **CH $\vee$** to select "VOLUME".
- 9** Press **$\triangleleft$** / **$\triangleright$** to set volume.
- 10** Press **MENU** until normal screen appears.
- 11** Press **Power** to put TV set into Standby mode.

```
MENU
PICTURE
SOUND
FEATURE
♦TIMER
CH-SETTING
```

```
TIMER
OFF □ --:--
♦ON □ --:--
POSITION
VOLUME --:--
```

```
TIMER
OFF □ --:--
♦ON □ 8:00
POSITION
VOLUME --:--
```

```
TIMER
OFF □ --:--
ON □ 8:00
♦ POSITION CH28
VOLUME --:--
```


```
TIMER
OFF □ --:--
ON □ 8:00
POSITION CH28
♦ VOLUME 20
--:--

~CH $\wedge$ :SELECT
~CH $\vee$ :ADJUST MENU:RETURN
```

- NOTE**
- To cancel the timer setting, press **NORMAL** when "♦" is displayed on the left of "ON $\square$ " so as to set the timer to "--:--".
 - The timer can be set in ten-minute intervals.
 - The On Timer is cancelled if the power is turned off using **Power**.
 - If the TV set is turned on by the On Timer, then the TV set will be automatically turned off in two hours if no buttons are pressed on the TV set or remote control.

Reminder on-screen timer

Lets you know when a preset length of time has passed by displaying a countdown timer on the screen. This is useful for timer cooking while you watch TV.

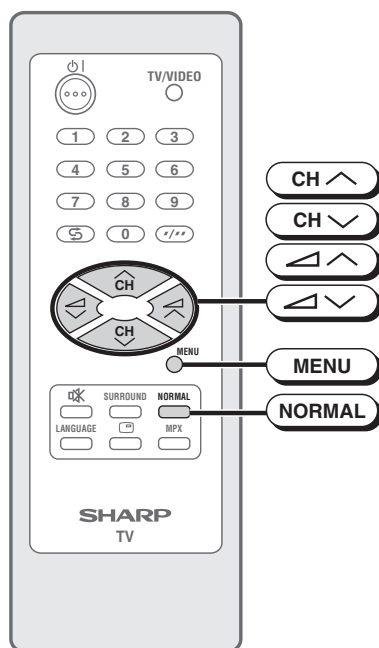

1 Press **MENU** to call MENU screen.

```
MENU
PICTURE
SOUND
FEATURE
◆TIMER
CH-SETTING
```

2 Press **CH ^** / **CH v** to select "TIMER".

3 Press **CH ^/v** to display TIMER menu.

```
TIMER
OFF □
ON □
POSITION
VOLUME
◆
```

4 Press **CH ^** / **CH v** to select "H".


5 Press **CH ^/v** to set time.

- Maximum time that can be preset is 12 hours and 50 minutes.
- The right example shows that the Reminder will be activated after one hour 50 minutes.

```
TIMER
OFF □
ON □
POSITION
VOLUME
◆ 1:50
CH^: SELECT
CHv: ADJUST MENU: RETURN
```

6 Press **MENU** until normal screen appears.

- Five minutes before the preset length of time expires (in the example, after one hour and 45 minutes) and each minute thereafter, the remaining time appears on the screen for several seconds.
- When the preset length of time has passed, "H 0:00" flashes in red.

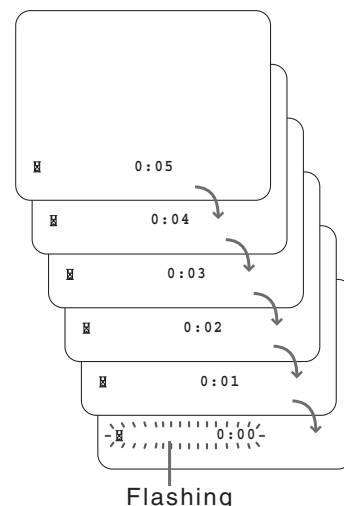

- NOTE**
- This function also works in the Standby mode. Power is automatically turned on five minutes before the preset length of time expires. The TV set automatically returns to the Standby mode approximately 1 minute if no buttons are pressed on the TV set or remote control.
 - The Reminder is cancelled if **POWER** on the TV set is pressed or if the power is otherwise interrupted.
 - The timer can be set in ten-minute intervals.
 - To cancel the timer setting, press **NORMAL** when "◆" is displayed on the left of "H" so as to set the timer to "- : - : -".




Connections


Connecting to a DVD player

The DVD input terminals (COMPONENT-IN) on the rear of the TV can be used to input high-quality images from a DVD player.

TV

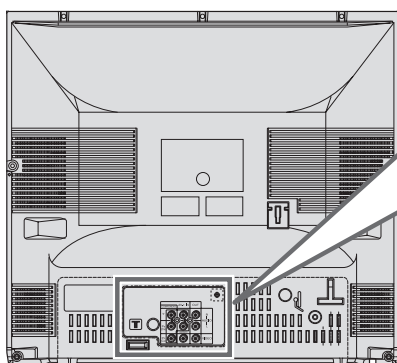


DVD input terminals

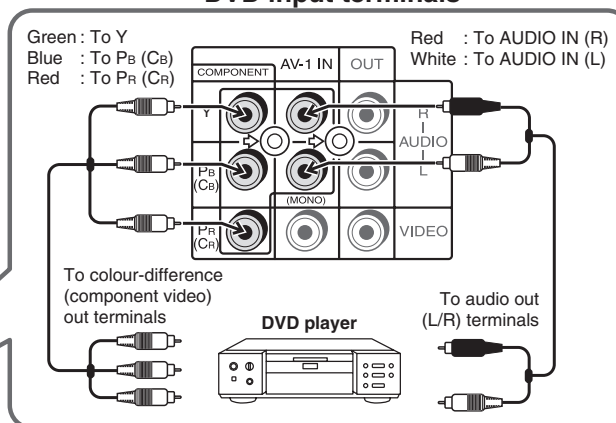

Connecting the video terminals

DVD input terminals	DVD player
COMPONENT-IN	Y or Y/Y
VIDEO	Pb(Cb) or B-Y/Pb
	Pr(Cr) or R-Y/Pr

Watching DVD Playback

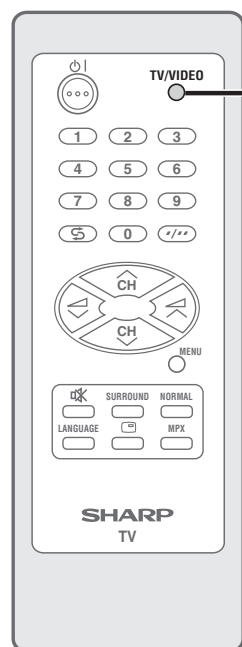

TV/VIDEO


1

Press **TV/VIDEO** to select "COMPONENT", DVD input screen.

2

Turn on the DVD player and begin playback.

COMPONENT

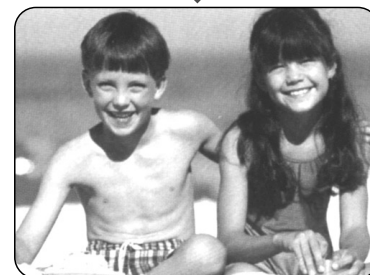


NOTE

- When connecting the TV to a DVD player via the Component-in terminals, the video and audio output from the DVD player through the Audio/Video out terminals on the TV are not support.
- Please refer to the operation manual of your DVD player for more information.
- Be sure to fully insert the plugs of the connecting cables into the terminals on the TV set and video equipment. Failure to do so may result in noise.
- Before connecting the cables, turn off the power of the TV set and video equipment.
- Always remove the cables from the terminals by the plugs and not the cables themselves.

Connecting to an antenna


To enjoy a clearer picture, use an outdoor antenna. The following is a brief explanation of the types of connections that are used for coaxial and feeder cables.

	If your outdoor antenna uses a 75-ohm coaxial cable with a standard DIN45325 plug (IEC 169-2), plug it into the antenna jack at the rear of the set.
	If your outdoor antenna uses a 300-ohm twin-lead flat feeder, connect a 300-ohm to 75-ohm impedance converter and plug it into the antenna jack at the rear of the set.

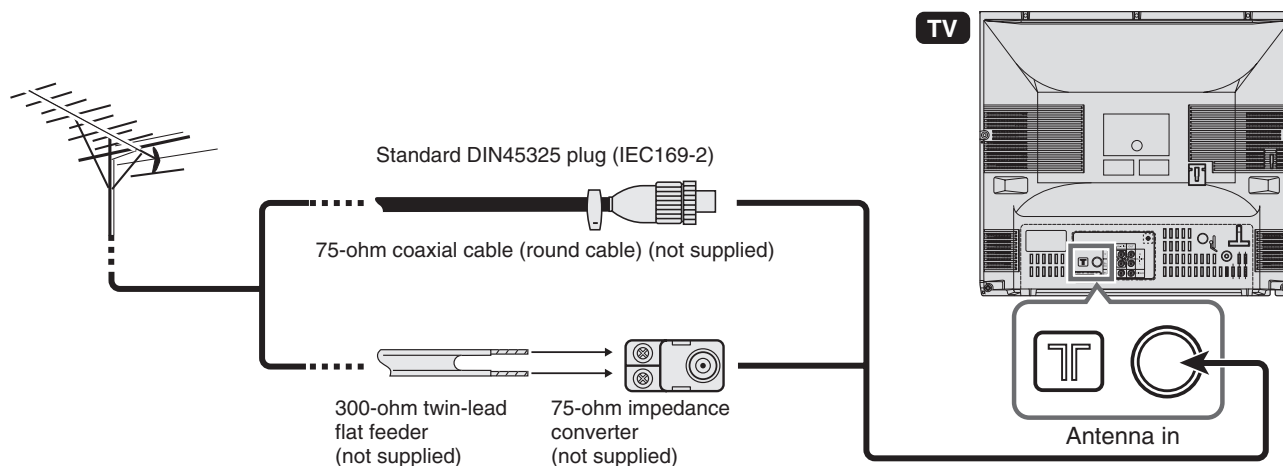

Connecting to an antenna via a VCR

You can also connect the TV set to the tuner on a VCR using the connection shown below.

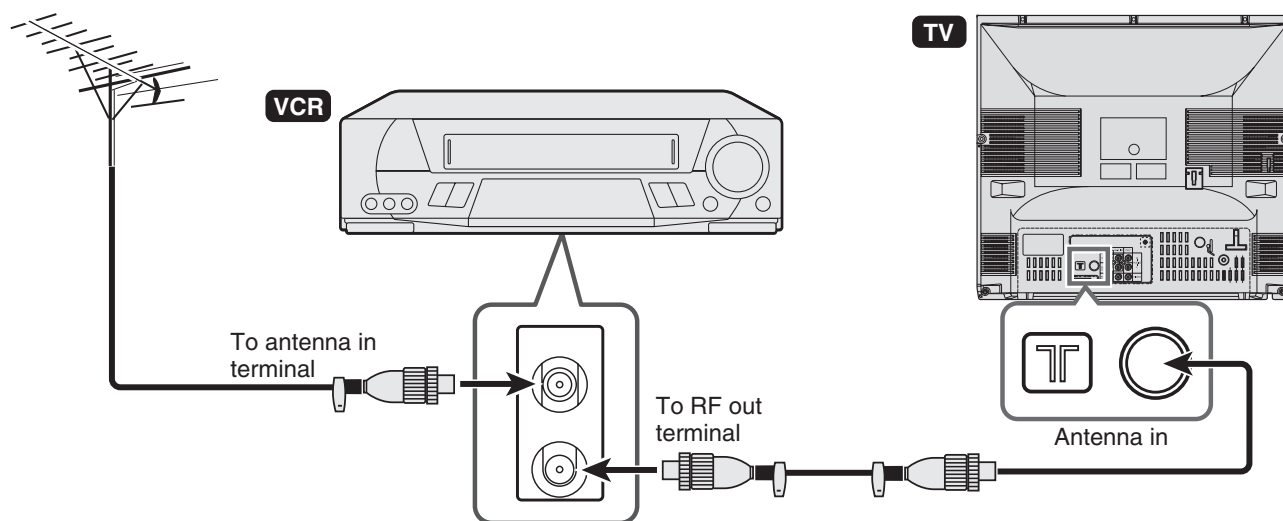


- NOTE**
- When using the RF terminal connection, set the TV to channel zero to make initial adjustments for the VCR.
 - Turn off the power on the TV set and the VCR being connected before making the above connections. Be sure the cord plugs are fully inserted in the connection terminals.
 - See the operation manual of your VCR for connection details.


Connecting to video equipment

Enjoy playback from a video disc player, VCR or other video equipment by connecting them to this TV set using the Audio/Video in terminals.

Example use of front terminals

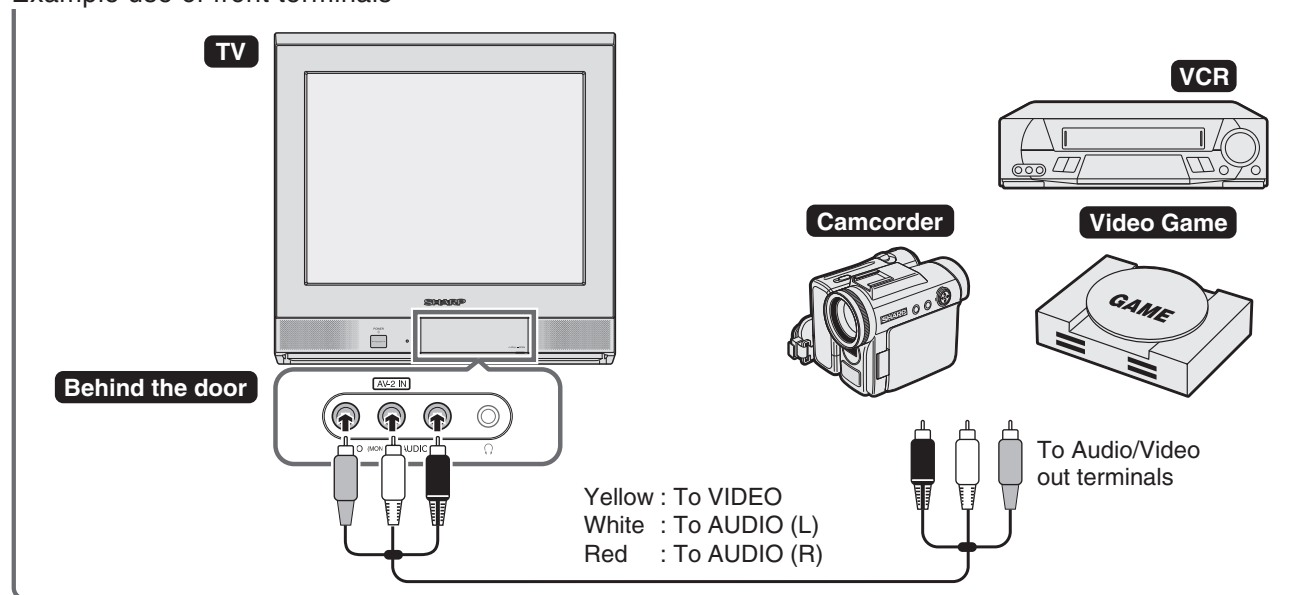

Example use of rear terminals

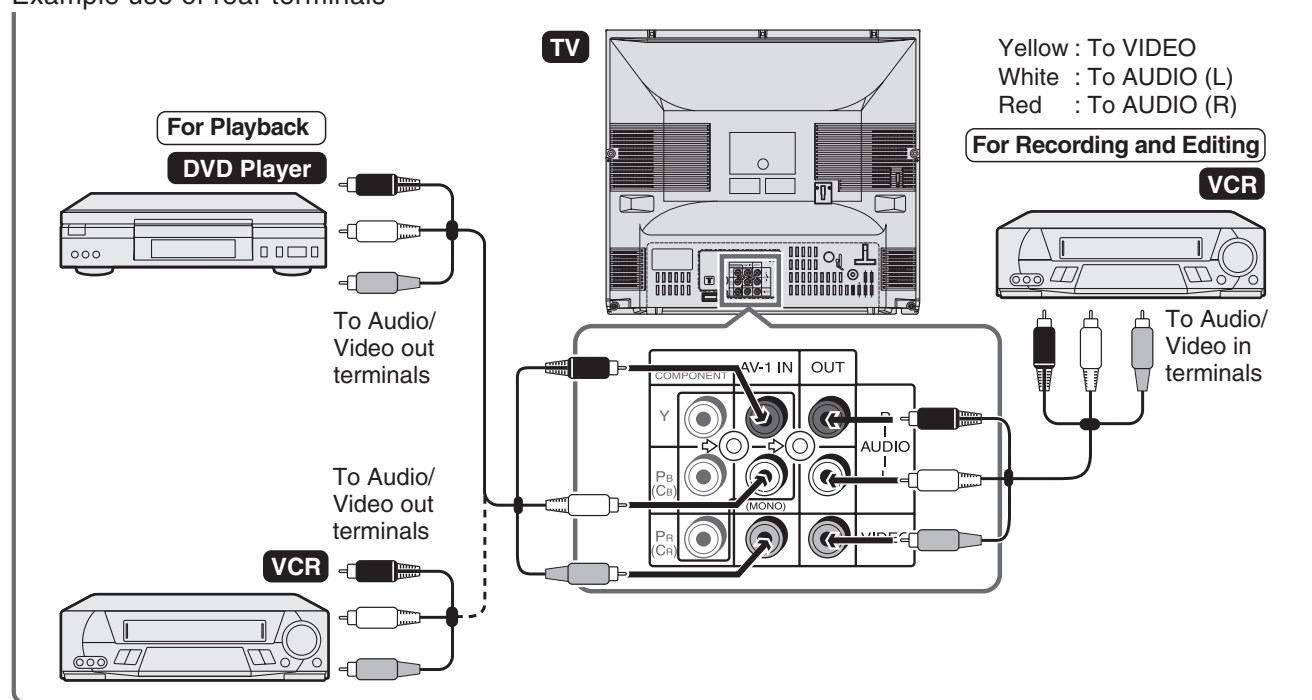

NOTE

- Turn off the power on the TV set and the VCR being connected before making the above connections. Be sure the cord plugs are fully inserted in the connection terminals.
- For playback of monaural audio, connect the external source to the audio input left terminal on the front or rear of the TV set (MONO) to hear the same sound from both speakers.
- The audiovisual cords required to connect the TV set with video equipment may differ from those shown in the above diagram. See the operation manual of your video equipment for connection details.
- The above recording and editing connections are for intended solely for personal use and not for the illegal copying of audiovisual material protected by copyright laws.

Troubleshooting

The following problems do not always indicate a hardware failure. Therefore, please use the troubleshooting guide below before calling for repair service.
If, after following the guide none of the remedies work, unplug the TV set and call for service.

Quick Service Check List	Problems											
	Remote control does not work.	Bars on screen	Picture distorted.	Picture rolls vertically.	No colour	Poor reception on some channels	Picture weak.	Picture lines or streaks	Picture ghosting	Picture blurred.	Sound OK, picture poor.	Picture OK, sound poor.
Possible Causes/Remedies												
Try a new channel to check for possible station trouble.			●	●	●	●	●	●	●	●	●	●
TV not plugged in. Outlet power OFF.	●											●
① POWER switch of TV not ON.	●											●
Antenna not connected to terminal at the back of the TV set.					●	●	●		●		●	●
If outside antenna is used, check for broken wires.		●	●	●	●	●	●	●	●	●		●
Check for local interference.		●		●		●		●	●		●	●
Turn OFF using the ① POWER switch, then turn ON again after a minute.	●											●
Adjust COLOUR control.					●		●				●	
Check batteries in the remote control.	●											
Try fine tuning to correct.			●		●		●			●	●	
Contrast setting in picture mode might be all the way to the minus side. Press the NORMAL button on the remote control to correct.											●	●
Increase the volume.												●

NOTE • This unit is equipped with a microprocessor. Its performance could be adversely affected by external electrical noise or interference. If this should happen, unplug the unit and plug it in again after a few minutes.



Specifications

MODEL		21F-A30
Receiving System		
TV Broadcasts/ VCR Playback		PAL-B/G
VCR Playback		PAL 60 Hz NTSC 3.58 MHz NTSC 4.43 MHz
Laserdisc Player Playback (Using RF-in terminals)		PAL 5.5 MHz/60 Hz
Bilingual Broadcast		Mono Bilingual (B/G)
Reception Channels		
PAL-B/G	VHF	E2–E12 ch
	UHF	E21–E69 ch
CATV		S1–S20 ch, S21–S41 ch (Hyper)
Receiving Frequency		48.25 MHz – 863.25 MHz
Channel Tuning		100-Channel Electronic Tuner with Full Auto Tuning System
Picture Tube		21-Inch Flat CRT
Terminals		Audio/video input × 2 (front × 1, rear × 1) , DVD input (COMPONENT-IN) × 1 (rear) Audio/video output × 1 (rear) , Headphone jack × 1 (front)
Sound Output		4 W (RMS) × 2, total 8 W (RMS)
Power Source		AC 110 – 240V, 50/60 Hz
Power Consumption		97 W
Dimensions		502 (W) × 487 (H) × 481.5 (D) mm
Weight		22.0 kg (Approx.)

NOTE

- Design and specifications are subject to change without notice.
- Receiving system: These receiving systems, encompassing all currently available technology, include those with planned broadcast, videotape and laserdisc hardware and software.
- Reception channels: Some examples of the main receivable channels are shown above.

SHARP®
SHARP CORPORATION

Other ManualsLib Projects



www.manualslib.com



www.manualslib.de



www.manualslib.es



www.manualslib.fr



www.manualslib.nl



www.manualslib.mx



www.manualslib.tech 30+ Languages